


ZOOM 300 Firmware update

On screen


Functions


Follow carefully the steps to upgrade the ZOOM300 firmware:

From main menu click on **Preferences**

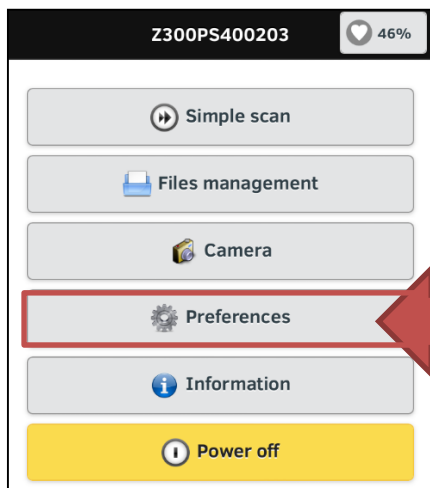

On Preferences page click on **Upgrade firmware**

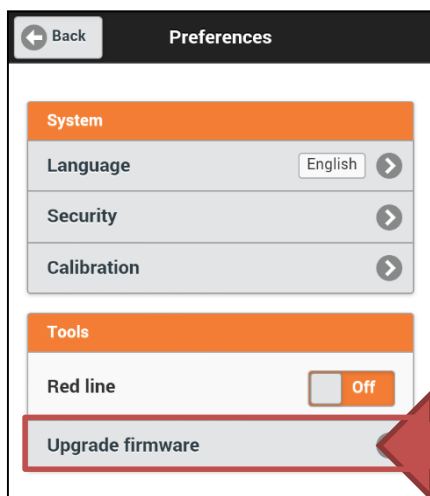


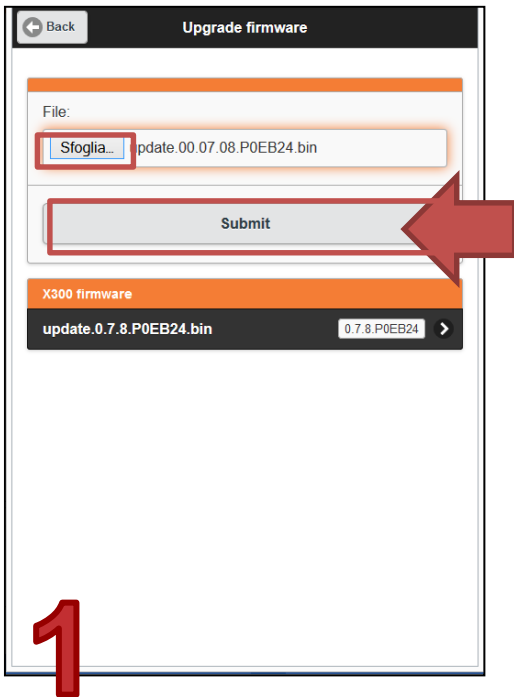

Step 1

Browse your computer or server to locate the firmware file (*.bin or *.x3u) provided by Midarex or Midarex authorized dealers.

Press the **Submit** button to upload the firmware file onto the ZOOM300 flash memory.

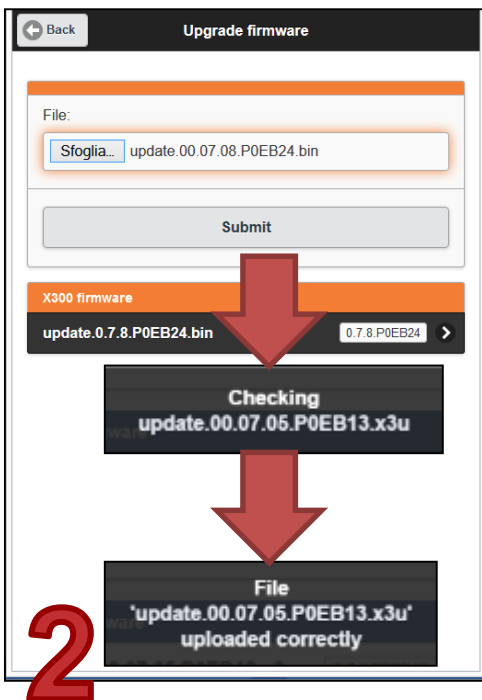


Step 2

Wait until the end of the upload procedure: the system will upload the firmware, check the upload procedure and inform about its correctness.

It takes less than a minute to complete the process.

NOTE

Do not turn off the scanner or remove the battery during the upload process.

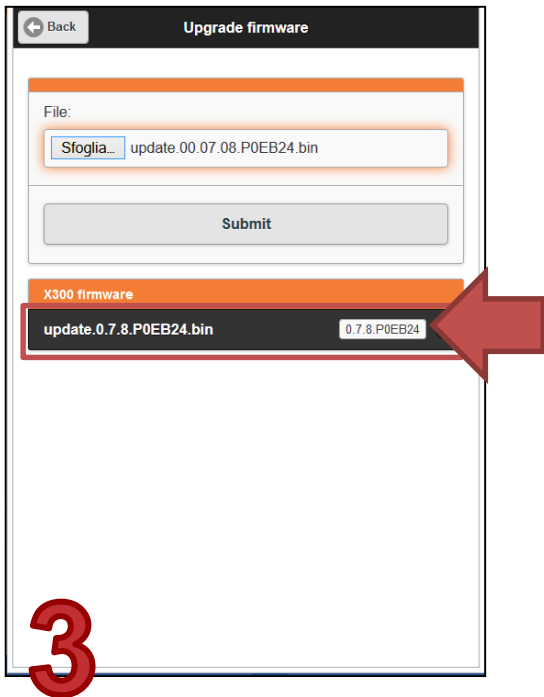

Step 3


The firmware is saved into the internal memory. Tap on it to apply the change and upload the system (red arrow).

The background color of the row containing the firmware is defined by the following criteria:

- **GRAY:** the firmware is more recent than the currently installed one.
- **BLACK:** the firmware has the same version of the currently installed one.
- **YELLOW:** the firmware is less recent than the currently installed one.

NOTE


It is possible to upload several firmware on the same scanner, the files will be visible in the ZOOM300 firmware list, but firmwares are upgradable only one-by-one.

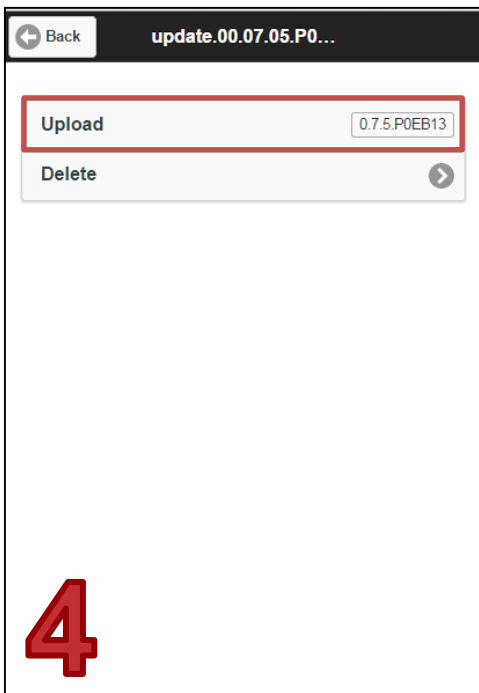

Step 4

Tap **Upload** button to apply the selected firmware.

Tap **Delete** button to erase the file from the internal memory.

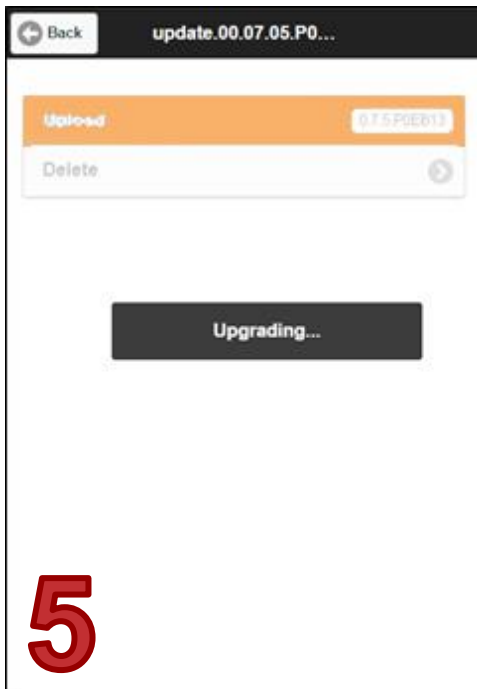

Step 5

Wait until the end of the upgrade procedure. It takes less than a minute to complete the process.

When the procedure is complete, the ZOOM300 will **automatically restart** and the firmware will **be automatically deleted** from the internal memory of the instrument.

NOTE

Do not turn off the scanner or remove the battery during the upgrade process.